

# Service Schedule

## SERVICE SCHEDULE

| System / Component  | Frequency                               | Procedure  |        |       |
|---|---|--|--------|-------|
|   |   | Inspect  | Change | Clean |
|   | Weekly - W<br>Monthly - M<br>Yearly - Y |  |        |       |
| <b>Fuel</b>   |   |  |        |       |
| Fuel Lines & Connections  | M                                       | X  |        |       |
| <b>Lubrication</b>  |   |  |        |       |
| Oil Level   | M                                       | X*   |        |       |
| Oil   | Y                                       |  | X**    |       |
| Oil Filter  | Y                                       |  | X**    |       |
| <b>Cooling</b>  |   |  |        |       |
| Engine Coolant Lines & Connections  | M                                       | X  |        |       |
| Engine Coolant Level  | M                                       | X  |        |       |
| Engine Coolant  | Y                                       |  | X      |       |
| Enclosure Louvers   | W                                       | X  |        | X     |
| <b>Engine</b>   |   |  |        |       |
| Air Cleaner   | Y                                       | X  | X***   |       |
| Spark Plugs   | Y                                       | X  | X***   |       |
| <b>Battery</b>  |   |  |        |       |
| Remove Corrosion, Ensure Dryness  | M                                       | X  |        | X     |
| Clean & Tighten Battery Terminals   | M                                       | X  |        | X     |
| Check Charge State  | M                                       | X  | X***   |       |
| Check Electrolyte Level   | M                                       | X  | X***   |       |
| <b>General Condition</b>  |   |  |        |       |
| Vibration, Noise, Leakage, Temperature  | M                                       | X  |        |       |
| <b>Generator System</b>   |   |  |        |       |
| Complete Tune-up and System Inspection  | Y                                       | To be completed by an Authorized Service Dealer. |        |       |
| <b>Footnotes</b>  |   |  |        |       |
| * Inspect the oil level monthly or every 12 hours during continuous operation.  |   |  |        |       |
| ** Change oil and oil filter after the first 30 hours of operation and then every 100 hours or annually thereafter, whichever occurs first. Change sooner when operating under heavy load or in a dusty or dirty environment or in high ambient temperatures. |   |  |        |       |
| *** Replace as necessary.   |   |  |        |       |