


\* - NOT USED WITH PREPACKAGED STANDBY GENERATORS

LEGEND	
ATS	TRANSFER SWITCH CONTACTOR
C1	SOLENOID COIL (UTILITY CLOSING)
C2	SOLENOID COIL (STANDBY CLOSING)
TR	RELAY, TRANSFER
TB	TERMINAL STRIP (CUSTOMER CONNECTION)
XA1, XB1	LIMIT SWITCHES, ACTUATOR
F1, 2, 3 & 4	FUSE, 5A
VR1, VR2	VARISTOR
NB	NB - NEUTRAL BLOCK

NOTE:  
ALL CONTACTS SHOWN WITH  
TRANSFER SWITCH IN UTILITY  
POSITION.

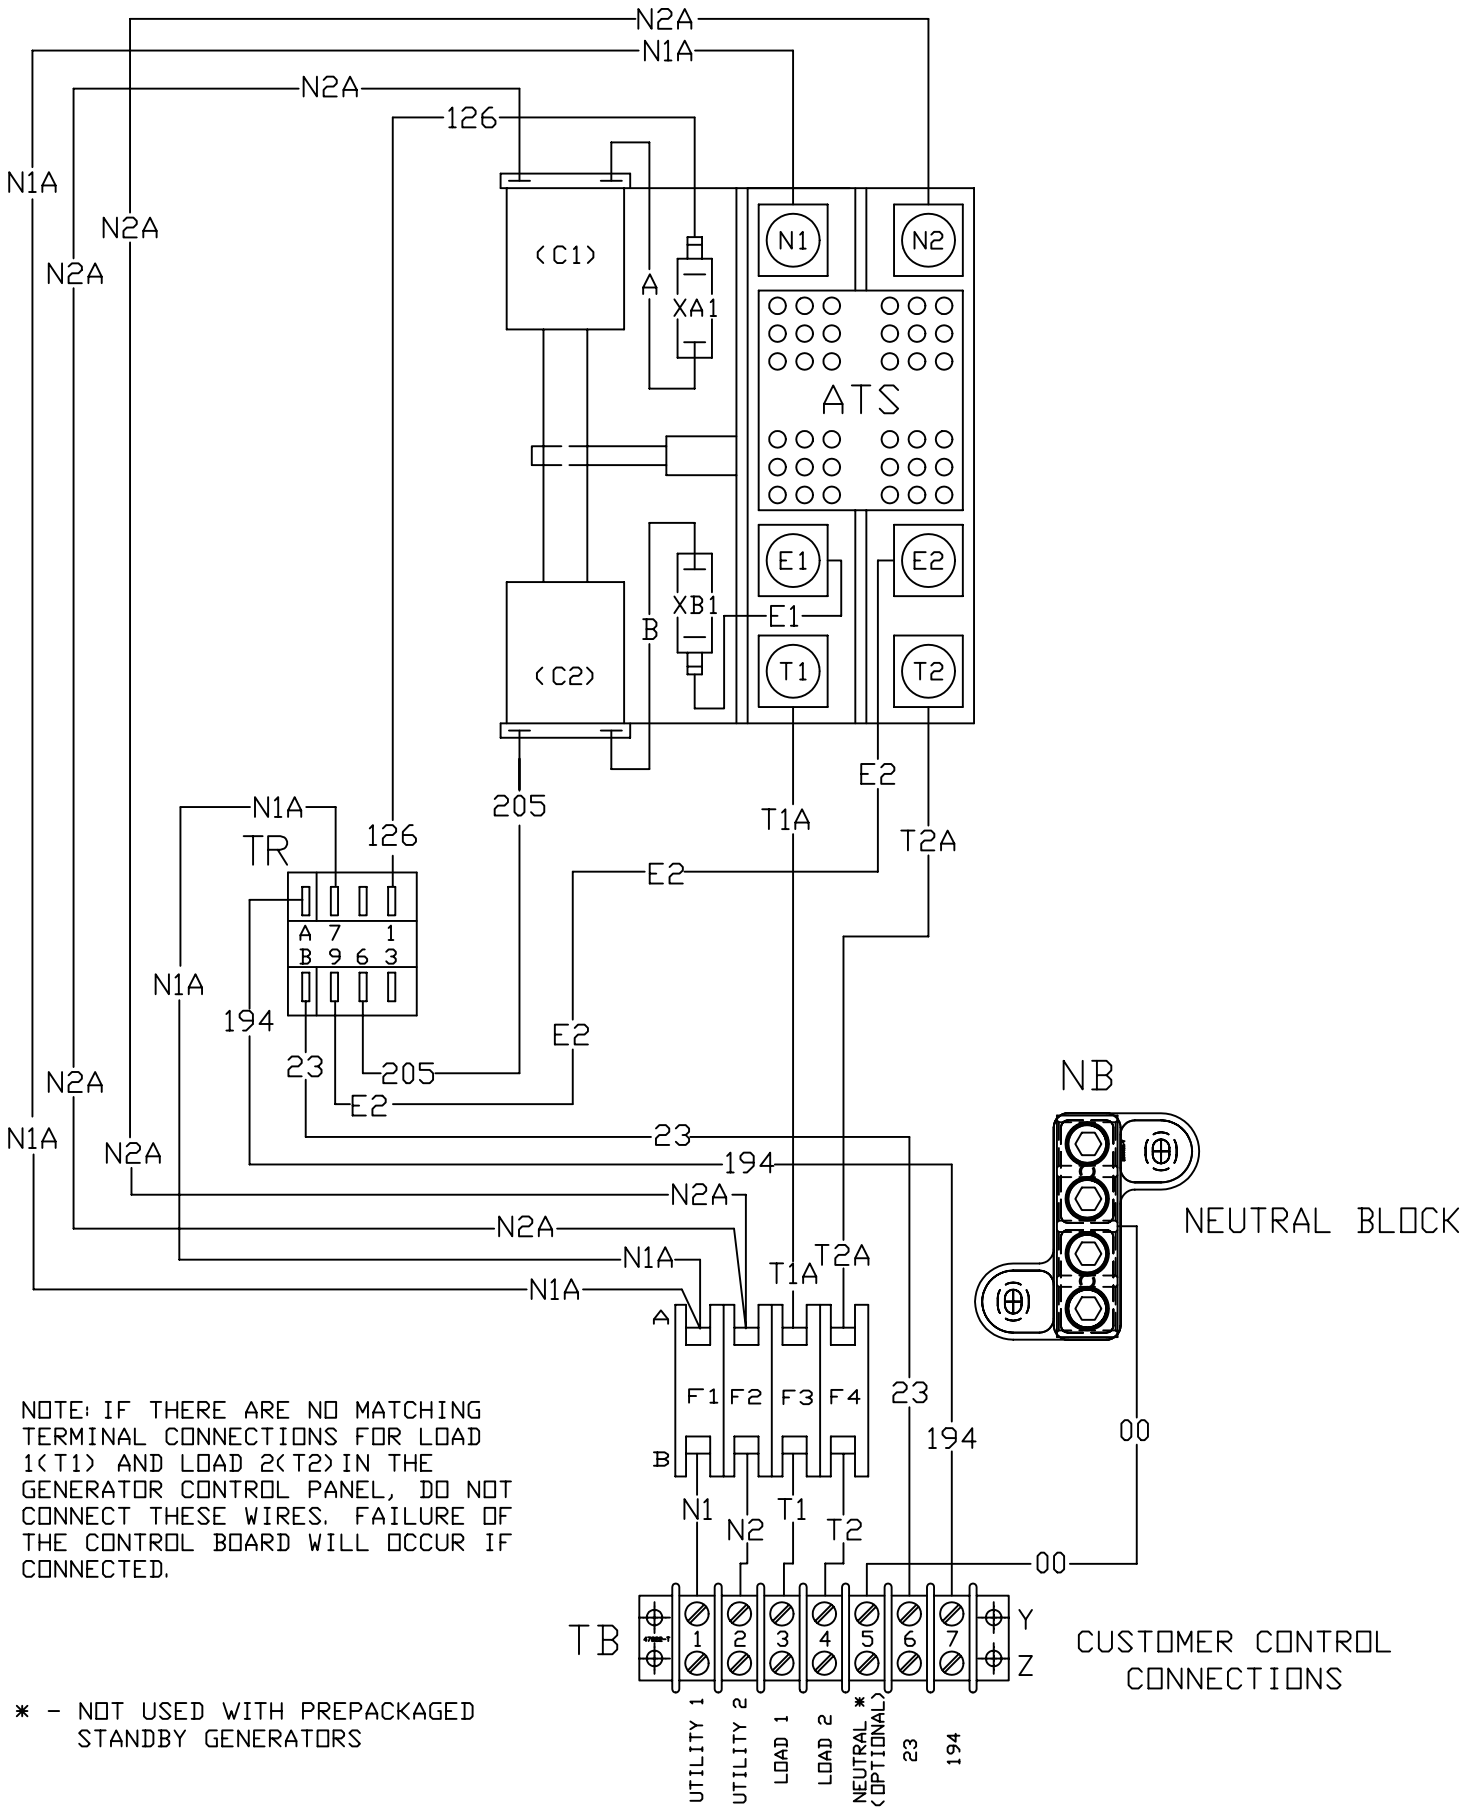

NOTE: IF THERE ARE NO MATCHING TERMINAL CONNECTIONS FOR LOAD 1(T1) AND LOAD 2(T2) IN THE GENERATOR CONTROL PANEL, DO NOT CONNECT THESE WIRES. FAILURE OF THE CONTROL BOARD WILL OCCUR IF CONNECTED.

\* - NOT USED WITH PREPACKAGED STANDBY GENERATORS