




UTILITY
METER
SOCKET

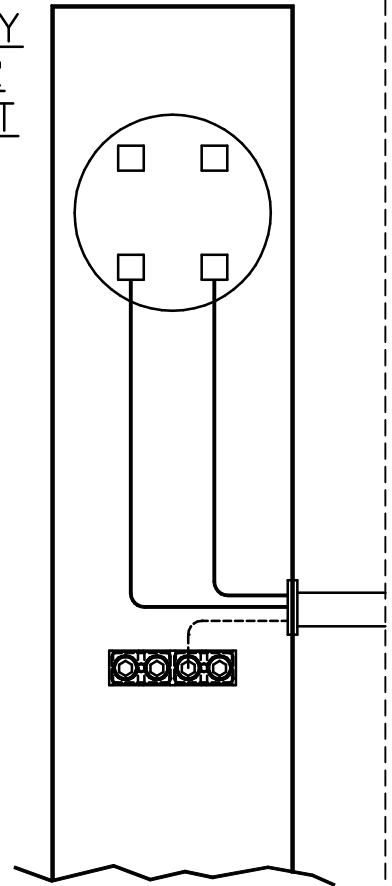

CONNECTION PANEL
LIQUID-COOLED ENGINE GENERATOR

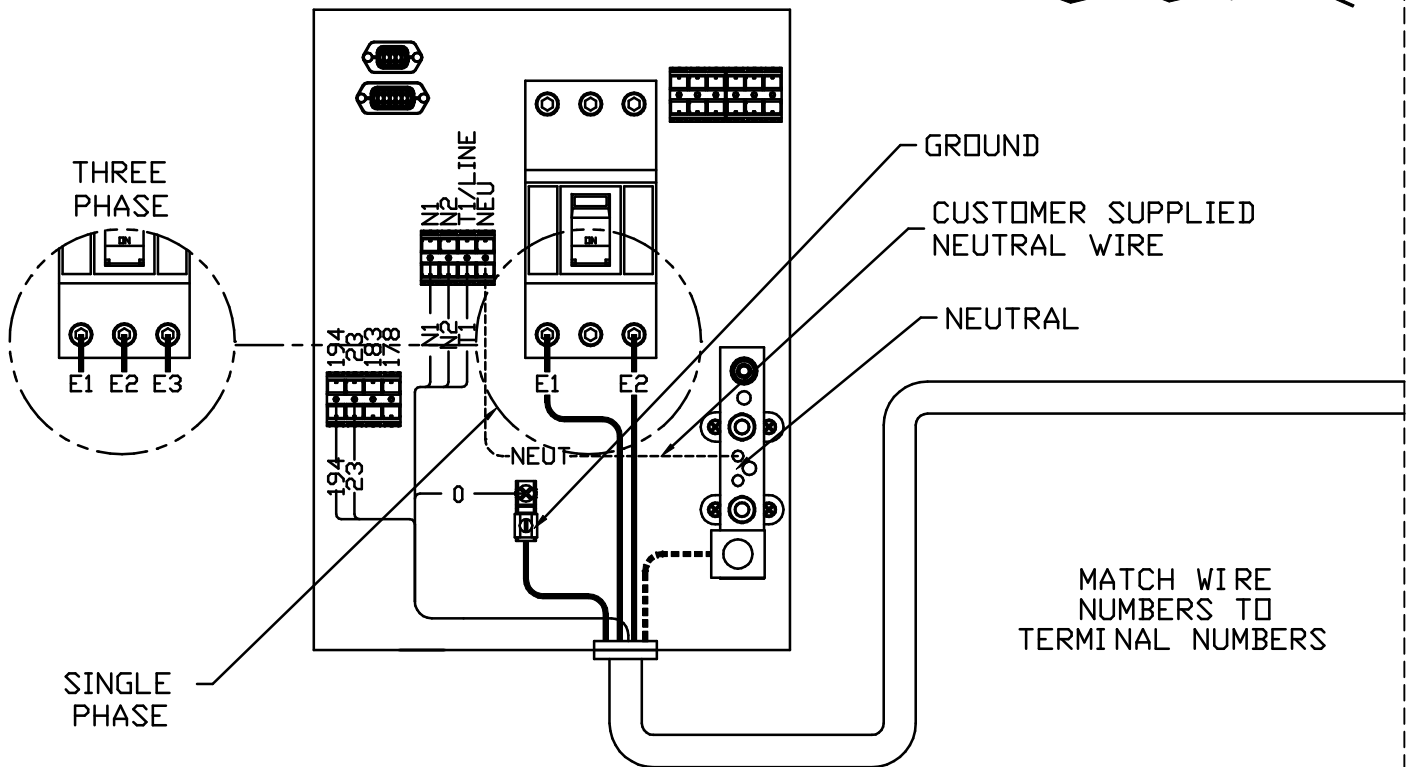

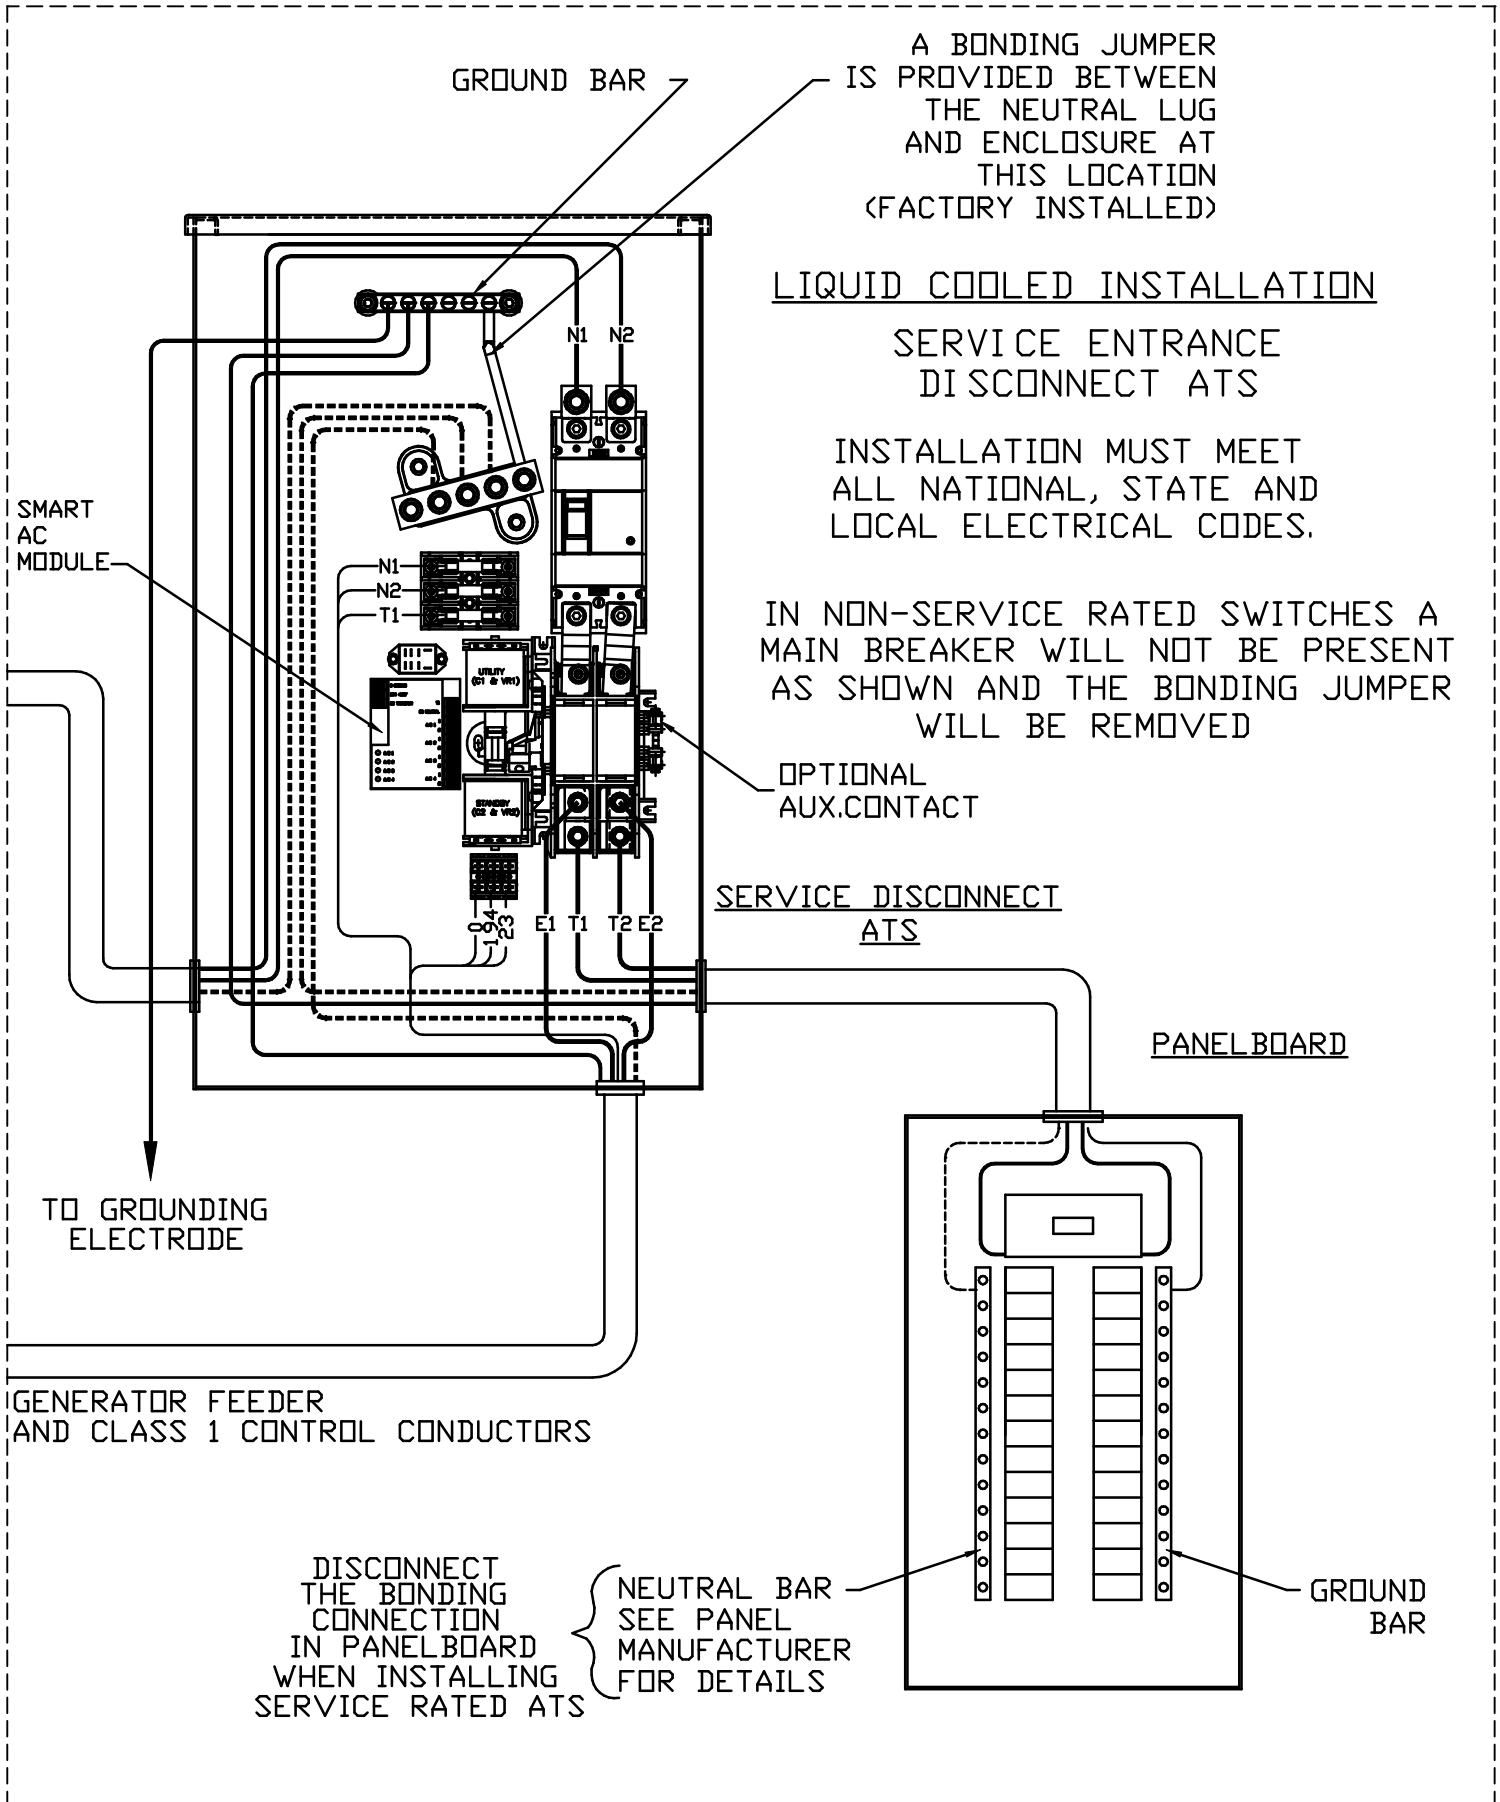

A BONDING JUMPER IS PROVIDED BETWEEN THE NEUTRAL LUG AND ENCLOSURE AT THIS LOCATION (FACTORY INSTALLED)

LIQUID COOLED INSTALLATION

SERVICE ENTRANCE DISCONNECT ATS

INSTALLATION MUST MEET ALL NATIONAL, STATE AND LOCAL ELECTRICAL CODES.

IN NON-SERVICE RATED SWITCHES A MAIN BREAKER WILL NOT BE PRESENT AS SHOWN AND THE BONDING JUMPER WILL BE REMOVED

OPTIONAL AUX. CONTACT

SERVICE DISCONNECT ATS

PANEL BOARD

SMART AC MODULE

GROUND BAR

TO GROUNDING ELECTRODE

GENERATOR FEEDER AND CLASS 1 CONTROL CONDUCTORS

DISCONNECT THE BONDING CONNECTION IN PANELBOARD WHEN INSTALLING SERVICE RATED ATS

NEUTRAL BAR SEE PANEL MANUFACTURER FOR DETAILS

GROUND BAR

GROUP G

